



USER HANDSET KEY PROGRAMMING USER GUIDE

FOR PANASONIC KX-T76XX & KX-DT3XX SERIES HANDSETS

PROGRAMMING REQUIRES THE HANDSET TO REMAIN ON THE REST

PROGRAMMING EXTENSION KEYS

1. PRESS PROG OR PROGRAM
2. PRESS THE DESIRED BUTTON YOU WISH TO PROGRAM
3. DIAL 1 PLUS THE EXTENSION NUMBER
4. PRESS ENTER OR AUTO/DIAL STORE BUTTON

On storing your keys in step 4 this will take you back to step 2 were you can program remaining keys.

PROGRAMMING EXTERNAL TELEPHONE NUMBER KEYS

1. PRESS PROG OR PROGRAM
2. PRESS THE DESIRED BUTTON YOU WISH TO PROGRAM
3. DIAL 2 THEN (9) + TELEPHONE NUMBER
4. PRESS ENTER OR AUTO/DIAL STORE BUTTON

On storing your keys in step 4 this will take you back to step 2 were you can program remaining keys.

PROGRAMMING PICK UP KEY

1. PRESS PROG OR PROGRAM
2. PRESS THE DESIRED BUTTON YOU WISH TO PROGRAM
3. DIAL 2 THEN *4001 FOR PICK UP GROUP 1 or DIAL *40 (02-32) FOR REMAINING GROUPS

PROGRAMMING PAGING KEY

1. PRESS PROG OR PROGRAM
2. PRESS THE DESIRED BUTTON YOU WISH TO PROGRAM
3. DIAL 2 THEN *3301 FOR PAGING GROUP 1 or DIAL *33 (02-32) FOR REMAINING GROUPS

Southern Business Communications Ltd



PROGRAMMING PARK HOLD KEY

1. PRESS PROG OR PROGRAM
2. PRESS THE DESIRED BUTTON YOU WISH TO PROGRAM
3. DIAL 52
4. PRESS ENTER/ AUTODIAL STORE
5. DIAL PARK NUMBER (00-99)
6. PRESS ENTER/AUTODIAL STORE

PROGRAMMING HEADSET

1. PRESS PROG OR PROGRAM
2. DIAL 61
3. PRESS ENTER OR AUTO/DIAL STORE BUTTON
4. PRESS UP OR DOWN ON JOG DIAL WHEEL
5. PRESS ENTER OR AUTO/DIAL STORE BUTTON

Southern Business Communications Ltd

Head Office - Southern Business Communications Ltd, Unit 1, The Broadway, Andover, Hampshire, SP10 2JF
Telephone: 01264 336644 - Fax: 01264 332083 - email: info@sbclimited.co.uk